

# BMOD-R

## MULTIFUNCTION MODULE FOR BATTERIES

### SIMPLE CONNECTION

The BMOD-R battery module is easy to install and doesn't require any auxiliary wires. The data is sent directly through the battery's main cables when it's connected to any compatible Bassi charger.

### MANAGEMENT & CONTROL

The data sent by the module enables optimal charge control with temperature compensation, scheduled equalizing cycles and the ability to control automatic battery watering systems (system and solenoid required).

### PROTECTION & DURABILITY

The data sent is also used to protect the battery: scheduled equalizing cycles prevent cell debalancing and temperature compensation with controlled water filling to prevent overheating. Also, in certain cases the battery's warranty can be extended when a BMOD-R is installed!

### STATISTICS & REPORTS

Bassi chargers display the BMOD-R's data as soon as a battery is connected.  
Pre-charge: Identification, capacity, voltage, chemistry and starting current.  
Charging: Temperature and water level  
After the charge: Number of cycles and choice of equalizing.

Connect the charger to a computer via USB to download the data and produce detailed reports.

COMPATIBLE CHARGERS:

**FLEXX** <sup>HFM</sup> 38 **FORZA** 712 **OMNI** <sup>IHF</sup> 38 **LOGIK** <sup>MHF</sup> 68



## LIGHT STATUS

BATTERY OK – STATE OF CHARGE DETECTION		
BATTERY MODULE STATUS LED	BLINK FREQUENCY	DESCRIPTION
Green	Low	Battery ok – state of charge >75%
Green	High	Battery ok – state of charge 50<>75%
White	High	Battery ok – state of charge 25<>50%
White	Low	Battery ok – state of charge <25%

BATTERY – WARNING STATE		
BATTERY MODULE STATUS LED	BLINK FREQUENCY	DESCRIPTION
Red	Low	Battery warning – Low voltage
Yellow	Low	Battery warning – Low temperature
Cyan	Low	Battery warning – Cells voltage unbalanced *optional

BATTERY – ALARM STATE		
BATTERY MODULE STATUS LED	BLINK FREQUENCY	DESCRIPTION
Red	High	Battery alarm – High voltage
Yellow	High	Battery alarm – High temperature
Blue	High	Battery alarm – Low level electrolyte

BATTERY MONITOR – FAULT STATE		
BATTERY MODULE STATUS LED	BLINK FREQUENCY	DESCRIPTION
No lighting	Nothing	Battery monitor not installed properly or failed
Purple	High	Battery monitor – Not programmed
Cyan	High	Water and temperature sensor not installed properly or failed